

- 150 psi Safety release valve will release air pressure from the tanks so they don't over expand and explode
- 125 psi tanks are fully charged no more air is needed AKA air compressor will stop pumping air
- 100 psi air compressor will turn and start pumping air in to the tanks until they reach 125psi again
- 60 psi low pressure warning will come on if this happens pull over immediately and notify dispatch that your losing air pressure (DO NOT IGNORE)
- 20-45 PSI in a truck or tractor your spring brake will pop and set your parking break automatically
- 20-30 psi in a school bus your spring brake will pop and set your parking break automatically